

Suspending and Resuming the Mesa

We recommend suspending your Mesa if you plan to turn it off for less than two weeks. While it is suspended, you should attach it to a wall charger when not in use.

Suspending the Mesa is different from powering it off. When the device is suspended it goes into a very low power mode. When it is resumed, the Mesa resumes where it was before it was suspended.

To suspend your Mesa, press and release the power button. To resume the device from suspend mode, press and release the power button again.

When the Mesa starts to suspend, the backlight shuts off and the green LED turns on. It can take several seconds to fully suspend, especially when the cell modem is on.. The green LED turns off when suspend is complete. Some battery power is used during suspend.

Resetting the Mesa

It can be helpful to reset the Mesa when it is unresponsive, slow, or programs won't launch. You may be asked to perform a reset when an application is installed.



CAUTION: Be aware that during a reset, applications are terminated and unsaved work may be lost.

Follow these steps to reset your Mesa:

1. Save your open files and close any running programs.
2. Press and hold the Power button until the Power Button menu appears.
3. Choose Reset.

You can also reset the Mesa by pressing the power button for 10 seconds or until the screen goes dark. After a few seconds, the Mesa automatically turns on. This method is useful if your Mesa locks up.

Powering Off and Powering On the Mesa

To preserve battery power, we recommend you power off the Mesa if it will not be used for two weeks or longer.

⚠ CAUTION: Be aware that when the Mesa is powered off, it closes all programs and powers down all system components except for the real-time clock. Unlike suspend mode, the device resets when it is powered on again. Any unsaved data is lost.


 
 
1. Save all open files and close any running programs.
2. Press and hold the power button until the power menu appears.
3. Tap Power Off. A warning dialog appears. Tap OK.

To power on your Mesa, press the power button.

Restoring the Mesa to its Factory State

Follow the steps below to restore user storage, settings, and icons on your Mesa to their original factory defaults.

⚠ CAUTION: Restoring the Mesa to its original factory state permanently erases data saved on the Mesa, any software you installed, and any changes you made to the Mesa (including settings changes).

To restore factory defaults (clean boot), press and hold the rotate  + up  + return  buttons simultaneously. The first tick mark lights up and the Mesa looks to see if these keys are being pressed. If so, the backlight dims and the boot process stalls until all these keys are released. The backlight returns to normal brightness and the boot process continues.

Communicating with a Desktop Computer

The Mesa can connect to a desktop or laptop computer allowing you to synchronize information and download software and files.