



Firmware Updates for SHC6400

Firmware updates for the BIOS (UEFI) and EC (Embedded Controller) are available for SHC6400.

To install the latest firmware automatically via the Internet

1. Attach external power supply.
2. Connect to the internet (if not already).
3. Open Device Settings > Update and select Check for updates.
4. Select to install firmware updates. The system will likely restart during the process.

If you need to install offline or through custom system security,

1. Download the following (3) files to SHC6400 and unzip.
 - [SHC6400 BIOSUpdater vX.xx.exe](#)
 - [SHC6400 ECUpdater vX xx.exe](#)
 - [SHC6400 OS Patch-XXXXX.exe](#) (this file size is very large)
2. Attach external power supply.
3. Run each file separately.
4. Follow the on-screen instructions. The system will likely restart during the process.