

# SHC6400 Setting Active Hours for Windows updates

Set active hours for Windows updates to avoid operating system updates and restarts during working hours.



#### Windows 11 Updates

From the Desktop





	Q Search for	apps, settin	gs, and document	s			
	Pinned				A	\II apps →	
	C Edge	Word	Excel	PowerPoint	Office	Outlook (new)	
	Microsoft Store	Photos	Device Settings	Camera	Settings	Xbox	:
	Solitaire & Casual Games	Spotify	Grammarly	Camo Studio	Luminar Neo - Al Photo Editor	Microsoft Clipchamp	
Recommended More >							
	•					Ċ	

# **Windows Update More Options**

- Under the More Options section you can customize when and how updates are applied.
- **Tap** Advanced Options.

SOKKIA



# Windows Update Active Hours

- To have updates applied to the controller during a specific time frame to avoid interruption during active hours do the following.
- Adjust active hours

SOKKIA

Tap the dropdown and change the setting from Automatically to Manually.



# **Windows Update Active Hours**

- When Update Manually is selected, a pop-up appears showing options to set active hours for both AM and PM.
- **1 Tap AM** time to set a start time when the controller will be in use.
- 2 Tap PM time to a period when the controller will not be in use.
- 3 Tap to save your changes.

SOKKIA

 Remember to allow enough time before starting work and after finishing to ensure updates do not interfere with normal operations.



