

TECHNICAL SUPPORT – WORKFLOW

Changing Units Setting on the Sokkia SDL30/50 & Topcon DL-502/503.

1. From the main screen, press the MENU button.
2. Press the MENU button again to get to the second page of the menu (denoted by P2 on the screen.)
3. Arrow over to the CONFIG selection and press the ENTER (↵) key.
4. Again press the MENU button to get to the second page of the config menu.
5. Arrow over to the UNIT selection and press the ENTER (↵) key and then select your unit type.
6. Highlight your intended unit setting and then press the ENTER (↵) key to save.

Note: If you already have a job started with existing data you CANNOT change the units setting. You will need to generate/select a new JOB file that has no data and then follow the steps listed above.

