

Sokkia RC-PR5 Remote - Performing Reset

Why reset the Sokkia RC-PR5 Remote?


If the Sokkia RC-PR5 remote will not pair with a total station or Bluetooth communication is problematic, resetting the RC-PR5 initializes the Bluetooth module, returns all parameters to default and resets pairing. The serial number and Bluetooth module power settings remain unchanged.

What you will need

- Sokkia remote to be reset with a charged battery.

Resetting the RC-PR5

- While holding the FAR button and the SEARCH button, press the POWER button to switch the remote on. Release the POWER button and continue holding the FAR and SEARCH buttons for about 10 seconds until the beep sounds 3 times. Then release both buttons.

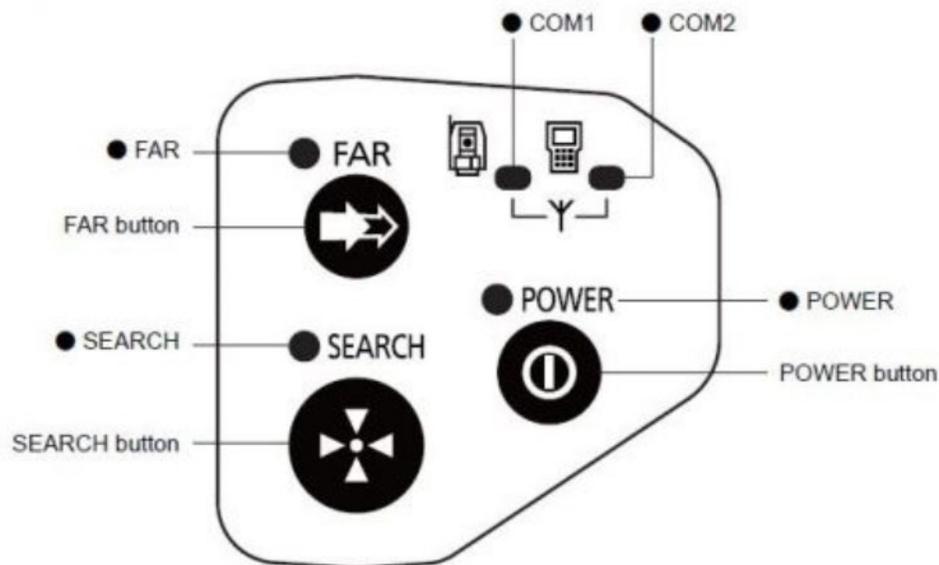

- Press and hold the FAR button for about 10 seconds. When the beep sounds several times release the button. The two com LEDs will be illuminated, and the FAR and SEARCH LEDs will blink while the RC unit performs the reset. The beep will sound several times followed by a short pause and another single beep. This signifies the operation is complete and the remote will automatically return to normal functioning.
- Turn off the remote. It is now ready to be paired to a total station.